

DTVS-DSR1 User Guide

Digital Satellite Receiver



Contents

Safety Instructions	5
Warning	5
Copyright Statement	5
Disclaimer	5
About the Set Top Box	6
Main Features	6
Package Contents.....	6
Product Overview.....	7
Front Panel.....	7
Rear Panel.....	7
Remote Control.....	8
Installing the Batteries.....	10
Caution.....	10
Using the Remote Control.....	10
Connecting to Equipment.....	11
How to get good reception.....	11
Connections to a TV	11
First Time Installation.....	14
Switch Program.....	14
Volume Control	14
Text	14
Info	15
Information Banner	16
Timer.....	16
Quick Select	16
Audio Selection.....	17
TV/Radio.....	17
Subtitles	17
Teletext Selection	17
EPG (Electric Program Guide)	18
Select a Programme in EPG	18
Button Functions in EPG.....	18
Recording	19
Start Recording	19
Stop Recording.....	19
Time shift Recording	20
PlayBack & Trick Mode.....	21
Button Functions in Playback	21

Main Menu	22
Customising the Channel Manager.....	22
Channel Organizer.....	22
Program Guide(EPG)	23
New Channel.....	24
Edit Channel.....	25
Delete All.....	26
Customising the System Installation	27
Installation	27
– Satellite Scan.....	28
– Blind Scan.....	29
– Auto Scan	30
– New Transponder	30
– Edit LNB.....	31
– Delete Satellite	31
– Delete Transponder	32
Factory Default.....	33
S/W Upgrade via OTA.....	33
Country Setup	34
Version.....	34
Customising the System Configuration	35
Language Setup.....	35
OSD Setup.....	35
TV Setup	36
Time Setup.....	37
Wakeup Timer	37
RF Setup.....	38
Customising the Media Manager	39
Thumbnail Browser	39
– Record Bookmark	40
– Record Editing	41
– Rename	42
Recording Booked List	42
Media Information.....	44
Troubleshooting	45
Specifications.....	46
Warranty	47

Safety Instructions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- Do not stand it on soft furnishings.
- If any of the following situation arises, get the equipment checked by a service Technician:
 - The equipment has been exposed to moisture.
 - The equipment has been dropped and damaged.
 - The equipment has obvious sign of breakage.
 - The equipment has not been working well or you cannot get it work according to User's Manual.

Warning

- To prevent the risk of electric shock, do not open the cover or the back of the receiver.
- Do not block the ventilation holes of the device. Leave an appropriate gap above and around it to allow for adequate ventilation.
- Do not place the device in an unventilated cabinet or on top of a unit which emits heat.

Copyright Statement

No part of this publication may be reproduced in any form by any means without the prior written permission. Other trademarks or brand names mentioned herein are trademarks or registered trademarks of their respective companies.

Disclaimer

Information in this document is subject to change without notice. The manufacturer does not make any representations or warranties (implied or otherwise) regarding the accuracy and completeness of this document and shall in no event be liable for any loss of profit or any commercial damage, including but not limited to special, incidental, consequential or other damage.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

To reduce the risk of fire or electric shock, do not expose this apparatus to water or colds.

About the Set Top Box

This DVB-S Satellite Receiver is a Free-To-Air digital satellite receiver, allowing you to access free-to-air digital Satellite TV channels and radio broadcasts on your TV set. Its digital reception covers C & Ku band. TSR is supported for this Receiver. Compared with analog TV programs, digital TV programs eliminate the noise and interference by offering high quality video and audio. An on-screen initial installation guide is provided so that you can easily start to enjoy watching the programs. In addition, a fully featured remote control is included that offers you access to every feature with a simple press of a button.

Main Features

- Fully compliant with New Zealand DVB-S standards
- Full MPEG2 ISO/IEC 13818 transport stream compliant audio/video decoding
- QPSK demodulator
- Automatic/manual channel search
- Channel edit and deletion
- Parental lock control
- EPG (Electronic Program Guide) and teletext function (where available)
- Tuner RF in/loop through
- CVBS / YCbCr / HDMI / Digital Audio via coaxial
- Digital Audio and Video via HDMI output
- Recording via USB, Time shift recording
- RF Modulator support
- Full function remote control


Package Contents

Before installation, please check the items of the package. The package should contain the following items:

1. DVB-S Satellite Receiver x 1
2. Remote Control x 1
3. AAA size Battery x 2
4. Instruction Manual x 1
5. AV Cable x 1
6. HDMI Cable x1
7. Warranty Card x 1
8. Quick Start Guide x 1


Product Overview

Front Panel

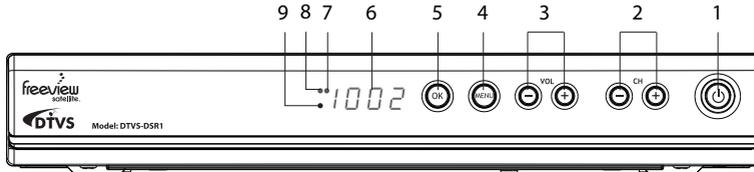

1. **Power button**
To switch the receiver between on and Off mode.
2. **CH +/- button**
 - To switch between channels.
 - Press to navigate up and down within the menu setup.
3. **VOL +/- button**
 - To increase and decrease the volume.
 - Press to navigate left and right within the menu setup.
4. **MENU button**
To open the menu so that you can change the settings of your receiver.
5. **OK button**
To confirm selection in OSD menu/display TV channel list.
6. **LED Display**
To display the status of the receiver, in playing menu it shows "MENU"; in watching TV channel it shows the channel No.; in standby mode it shows the time; in searching channels it shows "TUNE".
7. **LED indicator light 1**
Will appear in red when in standby mode.
8. **LED indicator light 2**
Will show in amber while watching Live TV. Will show in green when recording.
9. **IR receiver**


Rear Panel

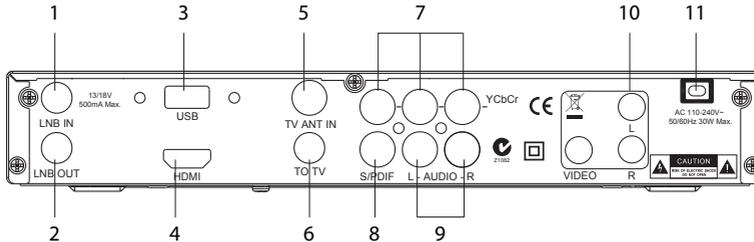

1. **LNB IN**
Connect to your satellite antenna.
2. **LNB OUT**
Connect to your TV if supported satellite or your another receiver.
3. **USB**
Upgrade for your receiver or use external hard drive to record.
4. **HDMI**
Output the high quality video and audio to your TV via HDMI cable.
5. **TV ANT IN**
Input the TV antenna to your receiver.
6. **TOTV**
Connect to your TV via coaxial cable.
7. **YCbCr**
Output the high quality video to your TV via RCA cable.
8. **SPDIF**
Output the digital audio.
9. **AUDIO L/R**
Connect to your TV or other equipment.
10. **Video**
Connect to your TV or other equipment.
11. **AC IN Socket**

Remote Control

1.  button
To switch the receiver between on and off(standby) mode.
2.  button
To mute and restore the sound output.
3. **TXT** button
To open teletext function.
4. **0-9** buttons
Enter values and select the channel directly by entering its number.
5. **EPG** button
Electronic programme guide.
6. **TEXT** button
To access to digitaltext service.
7. **Back** button
To return to the previous programme.
8. **INFO** button
 - Display the Now / Next EPG menu.
 - Display the service information.
9. **MENU** button
To open the main menu.
10. **EXIT** button
Exit the menu to normal TV view.
11. **◀▶▶▶** buttons
To navigate the menu setup.
OK button
Confirm selection in OSD menu/display TV channel list.
12. **CH+/-** buttons
To switch up and down in channels.
13. **VOL+/-** buttons
To increase and decrease the volume.
14. **Coloured** buttons
For interactive functions.
15. **SUBT** button
Change subtitle for current broadcast.
16. **TV/RADIO** button
Switch between TV and Radio mode.
17. **TIMER** button
To sleep timer of your receiver.

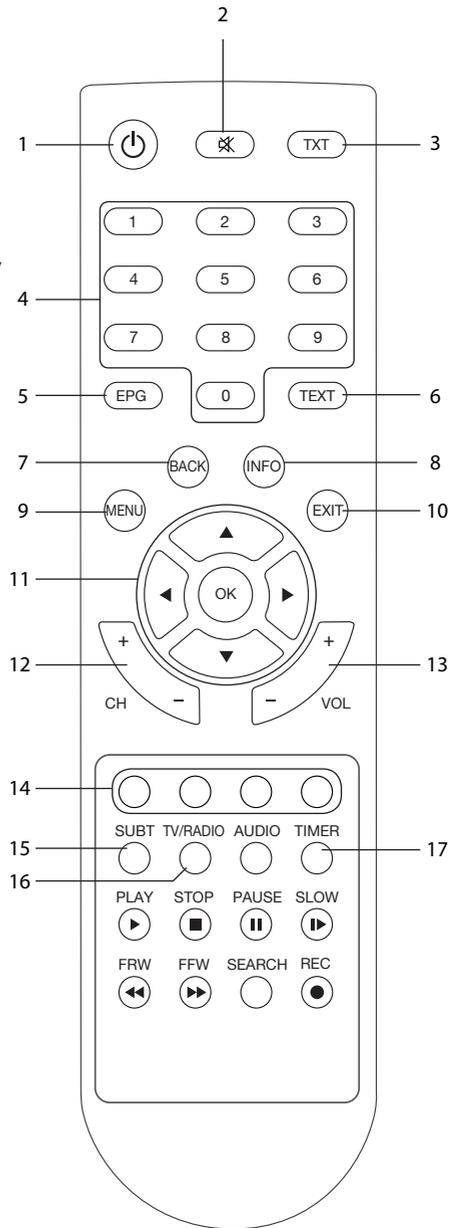

18. AUDIO button

To select Audio model.

19. ► PLAY button

Press once to start playback in the Thumbnail Browse menu when you selected the recorded programme.

20. ■ STOP button

To stop the playback or recording.

21. II PAUSE button

To pause playback,
To start timeshifting.

22. I► SLOW button

To slow forward playback.

23. ◀◀ FRW button

To fast rewind playback.

24. ►► FFW button


To fast forward playback.

25. SEARCH button

Invoke Thumbnail Browser menu.


26. ● REC button

To record the current programme.

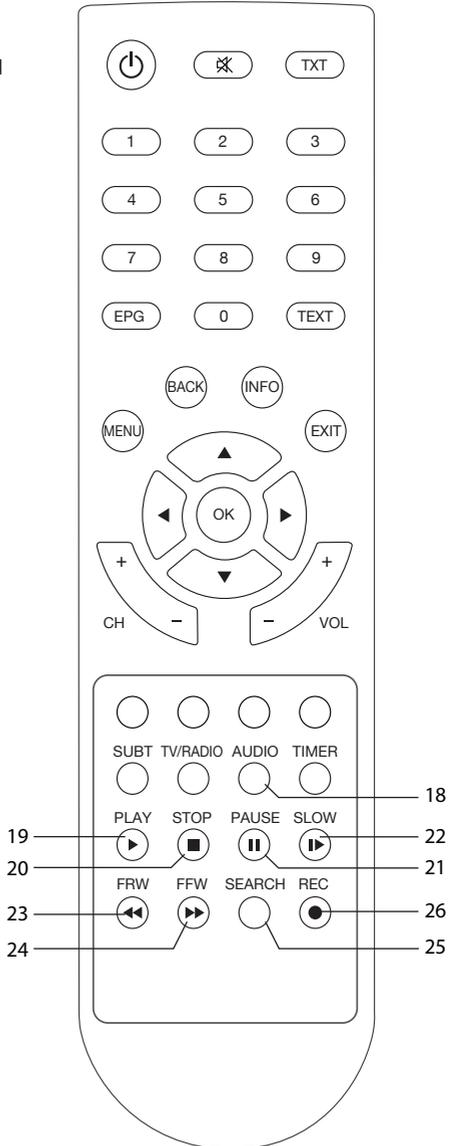

Installing the Batteries

Remove the battery cover from the remote control and put two AAA size batteries inside the compartment. The diagram inside the battery compartment shows the correct way to install the batteries.

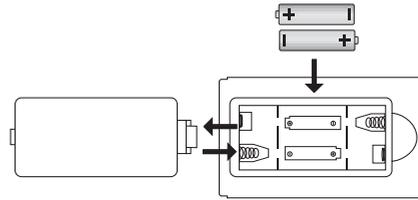

Caution

- Keep batteries out of childrens' reach.
- Don't attempt to recharge, short-circuit, disassemble, heat or throw the batteries into fire.
- Always replace both batteries at the same time. Never mix new and old batteries or batteries of a different type.
- If you don't intend on using the remote control for an extended period, remove the batteries to prevent possible leakage and corrosion.
- Don't drop, apply shock or step on the remote control.
- Don't spill water on the remote control.

If the receiver does not operate when operating the remote control from a close range, you may need to replace the batteries.

Using the Remote Control

- Point the remote control towards the front of your receiver.
- The remote control has a range of up to 7 metres from the receiver at an angle of up to 60 degrees.
- The remote control will not operate if its path is blocked.

Sunlight or very bright light will decrease the sensitivity of the remote control.

Connecting to Equipment

How to get good reception

There are many ways to connect the satellite receiver to your home entertainment system, depending on the equipment and connection types you have. However, for the best video/audio quality, use the higher quality YCbCr, HDMI and S/PDIF connections if available.


Please always remember to disconnect the satellite decoder from the power source prior to connecting or disconnecting the antenna cable to the LNB (on the satellite dish). This is necessary as the LNB installed on your dish may be powered via the antenna cable that connects to the antenna in on the rear panel of the receiver.

Connections to a TV

There are several ways of connecting you receiver to the TV and Hi-Fi System. Connection between the receiver and TV is possible via YCbCr component or via CVBS.


Connect the receiver via Video L/R, YCbCr, HDMI, SPDIF and Audio system.

Connecting to satellite dish

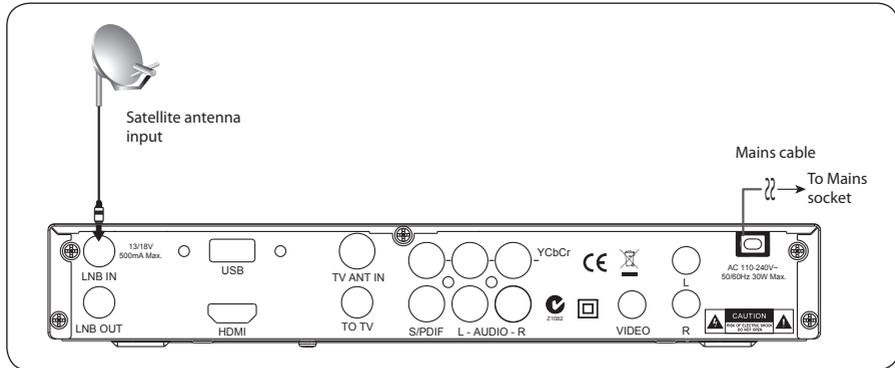


Connect mains plug last, ensure your receiver is connected to the TV and Dish before plugging in to mains power.


Connecting to via HDMI

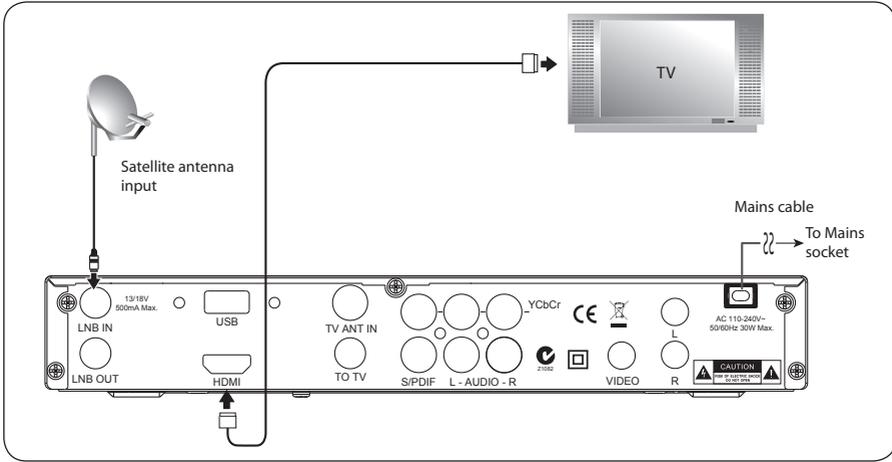

Connecting via Component

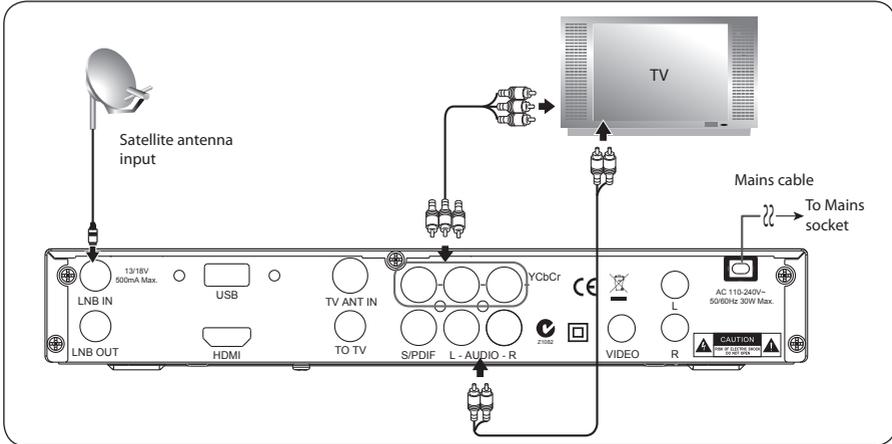


Connecting via Composite

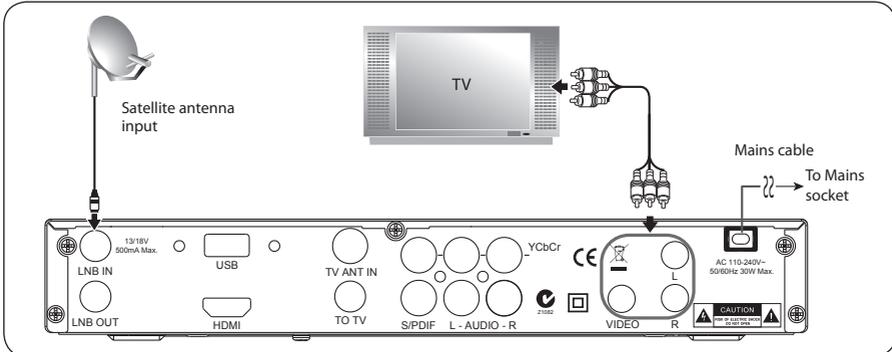


Connecting via RF

Refer to page 38 set the **RF Setup**.

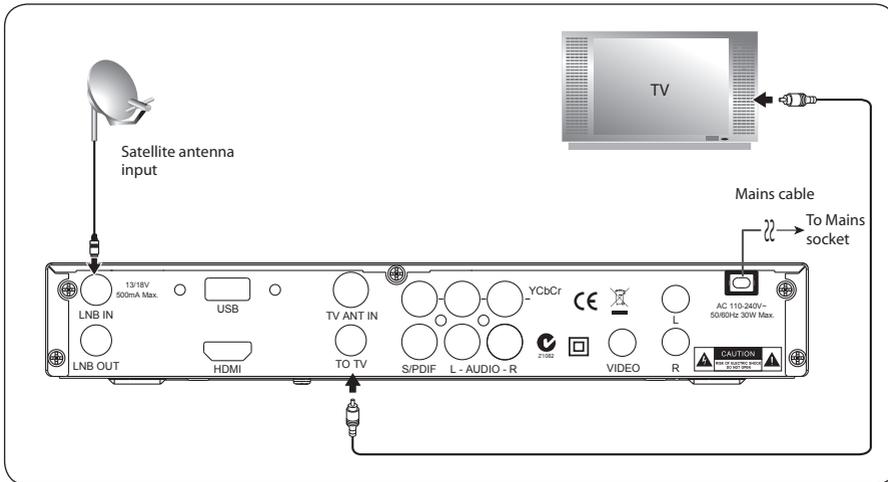


Connecting to Audio Amplifier

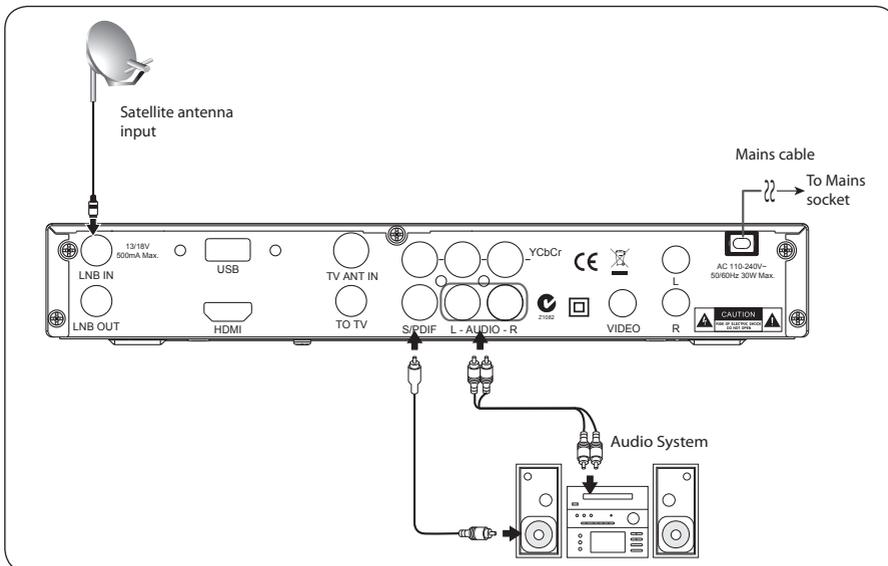

First Time Installation

After all the connections have been made properly switch on your TV, make sure the receiver is connected to the mains. If you are using the receiver for the first time or restored to factory default the **Welcome Screen** will be displayed and then press the **OK** button to auto scan.

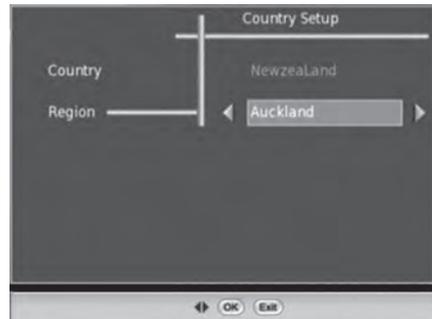

When the receiver has finished scanning, all active channels found will be stored automatically. The first found channel will be viewed. If you want to stop scanning, press the **EXIT** button to exit and the channels already found will be stored.

Switch Program

1. Press the **numeric** buttons (0~9) on the remote control to select the channel you want.
2. Press the **CH+/-** buttons on the remote control or the front panel to change the available channels up and down.
3. Press the **BACK** button to view the previous channel selected.

Volume Control

- Press the **VOL+/-** button on the remote control or front panel to adjust the volume and the volume bar will be displayed.
- Press the **⊗** button to switch the sound off. If you want to cancel this function, you can press the **⊗** button again or press the **VOL+/-**.



Text


- Press the **TEXT** button to enter MHEG if MHEG is transmitted.
- Press the **TEXT** button again or press the **EXIT** button to exit the MHEG (TV mode).

Info


- Press the **INFO** button and then the **Now / Next EPG** menu will be displayed.



- Press the **INFO** button again the **Extended EPG** will be displayed.
- Press the **EXIT** button to exit the menu.

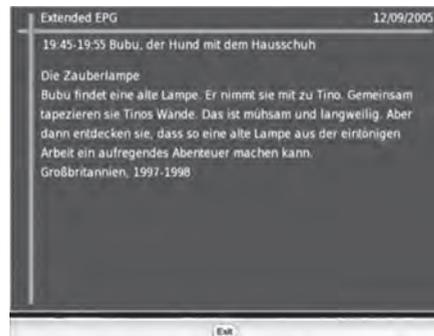


- After press the **EXIT** button the information banner is displayed and then press the **INFO** button again the **Service Information** will be displayed.
- Press the **EXIT** button to exit the menu.

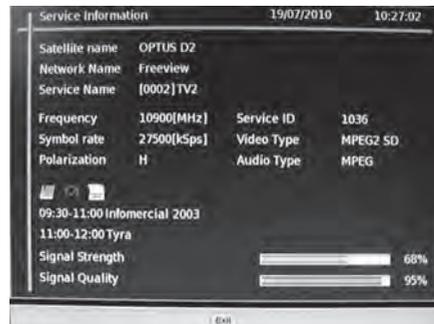

Information Banner

When you selected the channel the Information Banner will be displayed.

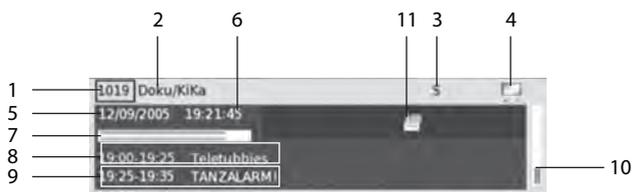

- | | |
|------------------------|---------------------------|
| 1. Current Channe No. | 7. Programme progress bar |
| 2. Current Channe Name | 8. Current event |
| 3. Audio Mode | 9. Next event |
| 4. TV / RADIO | 10. Signal Quality |
| 5. Current date | 11. SUBT / TXT |
| 6. Current time | |

Timer

- Press the **Timer** button and then the menu will be displayed.
- Press the ◀▶ buttons to select Off / 10 / 20 / 30 / 40 / 50 / 60 / 70 / 80 / 90 / 100 / 110 / 120 min(s) and then press the **OK** button to confirm.
- Press the **EXIT** button to exit the menu.



Quick Select

- Press the **OK** button the Service list menu will be displayed.
- Press the ▲▼ buttons to select the channel and press **OK** to confirm.
- Press the **OK** button again or **EXIT** button to exit the menu.



Audio Selection

- Press the **AUDIO** button the Audio Selection menu will be displayed and then press the **▲▼** buttons to select audio language.
- Press the **◀▶** buttons to select the audio mode L (Left) / S (Stereo) / R (Right), Stereo is default in the menu.
- When displayed the selection menu, the stereo audio type icon is not displayed then it is of AC3 audio type (Dolby digital). When toggling the audio, corresponding "audio type" will be displayed.
- Press the **OK** button to confirm and then the "Successfully saved" message will be displayed.



TV/Radio

Press the **TV/RADIO** button to switch between TV and Radio.

Subtitles

Press the **SUBTL** button to switch subtitles ON(English)/OFF.




Teletext Selection

- Press the **TXT** button and then the teletext menu will be displayed if Teletext is transmitted.
- Press the **▲▼** buttons to up and down the pages and you can press the **Color** buttons to select the programme.
- Press the **EXIT** button to exit the menu.



EPG (Electric Program Guide)

- Press the **EPG** button then the menu will displayed.
- Press the **EPG** button again to exit the menu.

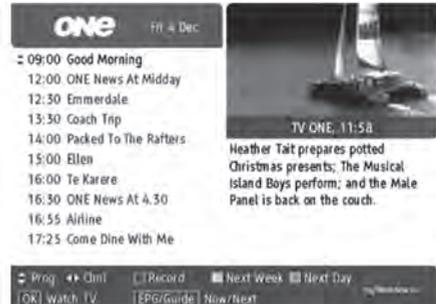

Select a Programme in EPG

- Press the **▲▼** buttons to select the desired programme and then press the **◀▶** buttons to select the desired channel.
- Press the **OK** button to confirm.

Button Functions in EPG

Remote Control Button	Function
▲▼	To select a programme
◀▶	To select a channel channel
RED	Timed recording, only one programs at the same interval
YELLOW	To display next week programme
BLUE	To display next day progamme
OK	To watch normal TV viewing when your selected the channel
EPG/GUIDE	To watch what's on now/next channels and programmes

Recording

Use this function to record the programme when you are watching the programme and save them for future viewing, you must connect an External Hard drive and make sure your Hard Drive has enough available memory space.

1. The DTVS-DSR1 allows only one recording at a time. During recording channel changes are not allowed.
2. When you use the hard disk drive for the first time, you will be required to format the drive. This unit only records on to a hard disk drive in its own proprietary format. (refer to page 44 for instructions on how to format)

Start Recording

- Press the **●** button while watching a live programme a default Recording name with time stamp & Record until option will be displayed.
- Press the **◀▶** buttons to select the record time or enter 1 to 480 minutes.
- Press **OK** button to confirm and the record information banner will be displayed.




Stop Recording

- Press the **■** button to stop the recording and then a confirmation will be displayed.
- Press the **◀** button select **Yes** and press the **OK** button to save the recorded programme in your Hard Drive and then the "Successfully Saved" message will be displayed.

Press the **▶** button select **No** to discard the record and the "Recording Discarded" will be displayed.

Press the **◀** button select **Rename**, the **Keypad** menu will be displayed then you can use the keypad to modify the record name.

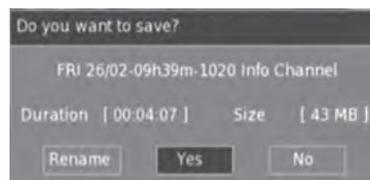

Time shift Recording

This function allows the receiver to virtually record the live viewing broadcast programme.


During normal TV viewing, you may press the **II** button to pause the live viewing broadcast programme if you want to go out for a while and then the Pause information banner will always displayed.

In the banner, you can notice the last stopped time and current time.

When press the **INFO** button the menu will display the event as TimeShifting is in progress.



Press the **■** button the "Recording Discarded" message will be displayed.

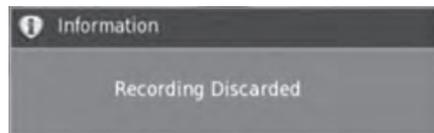

- Time shift and recording functions may not work if the signal strength is weak.
- Recording will stop automatically when the disk is full.
- During timeshift, changing channels will cause timeshift to terminate.
- You must have a hard disk drive installed and formatted for timeshift to work.

PlayBack & Trick Mode

When press the **SEARCH** button to enter **Thumbnail Browser** menu and then you can play a recorded programme during playback and the Info banner will display the current play time and total time.



While playback pressing the **INFO** button the menu will display the informations (Record Name, Duration, Created time & Date, Size etc.,) of the playing record. Press the **OK** button the current menu will disappear.




Button Functions in Playback

Remote Control Button	Function
	During playback, press the button to display a still screen and then press the button ► again to resume playback.
◀◀ or ▶▶	When playing <ul style="list-style-type: none"> • Press the ▶▶ buttons repeatedly to fast forward 2x / 4x / 8x / 16x / 32x. • Press the ◀◀ button repeatedly to fast rewind 2x / 4x / 8x / 16x / 32x.
►	<ul style="list-style-type: none"> • Press the ► button to resume playback from a still screen. • During fast forward / fast backward state, press the ► button to return to normal playback.
■	If you want to exit the time shift and return to the current live broadcast, press the ■ button and the "Recording Discarded" message will be displayed.

Main Menu


1. Press the **MENU** button and then the Main Menu will be displayed.
2. Press the **▲▼** buttons to up / down to the desired menu.
3. Press the **◀▶** buttons to move to the sub menu and press **▲▼** to choose the one you want.
4. Press the **OK** button to confirm.
5. Press the **EXIT** button to exit the menu.

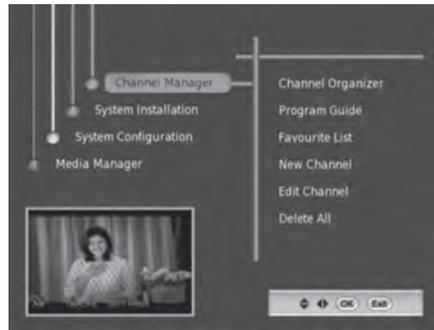

Customising the Channel Manager

Channel Organizer


1. Press the **MENU** button and then press the **▲▼** buttons to select **Channel Manager**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Channel Organizer** and then press the **OK** button to display the menu.
3. Press the **▲▼** buttons to select the channel and then press the **1 - 4** button to select the options.
Press the **OK** button to confirm.
Lock: press the 1 button.
Skip: press the 2 button.
Delete: press the 3 button.
Rename: press the 4 button and then use the 0-9 buttons to rename the channel name.
4. Press the **OK** button to return to the previous menu.
5. Press the **EXIT** button to exit the menu.

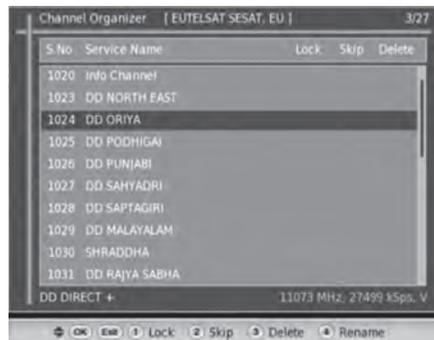

Program Guide(EPG)

Programme Guide menu will list down the available services when focus is set to the current service , then its corresponding current and next events are displayed.


1. Press the **MENU** button and then press the **▲▼** buttons to select **Channel Manager**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Program Guide** and then press the **OK** button to display the menu.
3. Press the **RED** button to view the event information of the previous day; press the **GREEN** button to view advanced features of the event information of the next day.
4. Press the **◀▶** buttons you can view the current day program guide information if available in the stream; Press the **▲▼** buttons to toggle within the service list. When the **OK** button is pressed for the selected service then the corresponding current events will be refreshed.
5. In the schedule dialog if **INFO** button is pressed on the selected event then the short and extended description of the selected event will be displayed.
6. Press the **OK** button to return to the previous menu.
7. Press the **EXIT** button to exit the menu.

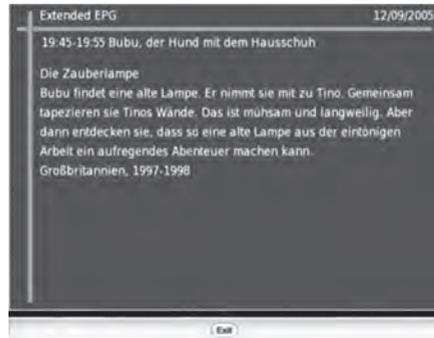

New Channel

You can directly tune a particular service from this menu and you must give **Audio PID / Video PID / PCR PID** to tune that service, also you must specify the carrier to which the newly created service has to be associated.

1. Press the **MENU** button and then press the **▲▼** buttons to select **Channel Manager**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **New Channel** and then press the **OK** button to display the menu.
3. You can press the **◀▶** buttons to select the carrier from the available carrier list when current watching carrier name displayed. First the focus should be set in the preferred carrier and press the **OK** button, then the new service will be included in that carrier.
4. The newly created service will be named as New Service by default and the you can press the **▶** button rename that service setting the focus on that Channel.
5. Service name can be changed by selecting the rename option, the new name can be given by selecting the letters in the keypad. First position the cursor in the service name to select a particular button in the keypad, press the corresponding **numeric** buttons to change the character, do the repeated press to toggle b/w the options. You can use the **Color** buttons to change the numeric / alphabetic keypads.
6. Press the **OK** button add the service after giving all the necessary parameters and then the "Successfully Saved" message will be displayed and the service will be added into the service list.
7. Press the **OK** button to return to the previous menu.
8. Press the **EXIT** button to exit the menu.

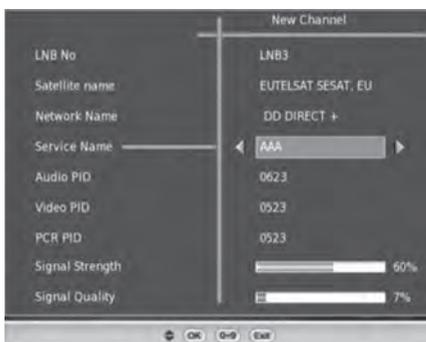

Edit Channel

1. Press the **MENU** button and then press the **▲▼** buttons to select **Channel Manager**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Edit Channel** and then press the **OK** button to display the menu.
3. Press the **▲▼** buttons to select a particular service among the available services and press the **▲▼** buttons to navigate with the Audio / Video PCR pids of a service.
4. Press the **0-9** buttons to edit a PID value and then a cursor is displayed and with that you can start to edit the value and press the **OK** button to confirm. If press the **EXIT** button the previous value will be restored and the cursor also disappears.
5. Press the **OK** button the "Please wait" message will be displayed. After the informations are updated the "Successfully Saved" message will be displayed.
6. Press the **OK** button to return to the previous menu.
7. Press the **EXIT** button to exit the menu.




S.No	Service Name	Audio	Video	PCR
1011	SS Music	0053	0054	0054
1012	Set Max	0062	0063	0063
1013	M TV	0081	0082	0082
1014	Jaya TV	0056	0057	0057
1015	Star Movies	0065	0066	0066
1016	Zee Marathi	0075	0076	0076
1017	SAB	0078	0079	0079
1018	ETV Gujarathi	0084	0085	0085
1019	ETV Oriya	0087	0088	0088
1020	Info Channel	0090	0094	0094


Delete All

You can delete **All TV services/All Radio services** as a whole in this menu.

1. Press the **MENU** button and then press the **▲▼** buttons to select **Channel Manager**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Delete All** and then press the **OK** button to display the menu.

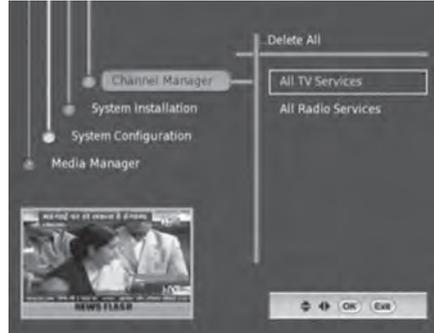


3. Press the **▲▼** buttons to select **All TV services** or **All Radio services** and press the **OK** button to confirm and then the password entry dialog will be displayed. (Default password is 0000)
4. After you entered the password in the menu the "Successfully Deleted" message will be displayed.
5. Press the **OK / EXIT** button to return to the previous menu.
6. Press the **EXIT** button to exit the menu.

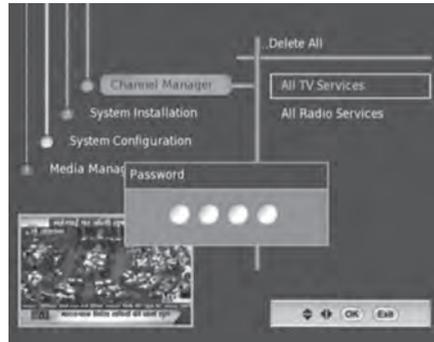

Only when a valid password is entered the delete operation is performed. When an invalid password is entered "Invalid Entry" message will be displayed. If there is no TV services present in the box and you invoke the **ALL TV services** the "NO TV services" message will be displayed.


Customising the System Installation

You can install the carriers automatically and manually in the **Installation Menu** and delete the carriers to load the default settings into your receiver.

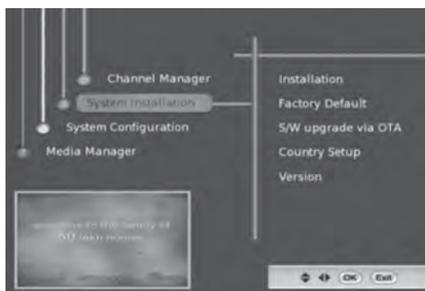

Installation

1. Press the **MENU** button and then press the **▲▼** buttons to select **System Installation**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Installation** and then press the **OK** button to display the menu.

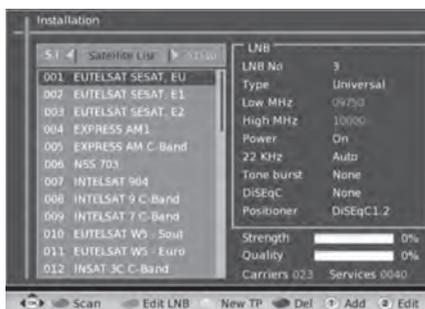

Scan	<ul style="list-style-type: none"> • Press the Red color button to enter Tuning Details and then press the OK button to scan. • Press the Exit button to return previous menu.
Edit LNB	<ul style="list-style-type: none"> • Press the Green color button to enter LNB mode and then press the OK button to save your setting. • Press the Green color button again to return previous menu.
New TP	<ul style="list-style-type: none"> • Press the Yellow color button to enter Add Carrier menu and then press the OK button to save your setting. • Press the EXIT button to return previous menu.
Del	<ul style="list-style-type: none"> • Press the Blue color button to delete the Satellite and then press the OK button to confirm. • Press the Green color button again to cancel the delete.
Add	<ul style="list-style-type: none"> • Press the 1 number button to enter Add Satellite menu and then press the ◀▲▼▶ buttons to setting. • Press the OK button to confirm and then the "Successfully Saved" message will be displayed. • Press the Exit button to return previous menu.
Edit	<ul style="list-style-type: none"> • Press the 2 number button to enter Edit Satellite menu and then press the ◀▲▼▶ buttons to setting. • Press the OK button to confirm and then the "Successfully Saved" message will be displayed. • Press the Exit button to return previous menu.

Satellite Scan

The Satellite scan option helps to add and scan multiple satellites at a time with the default parameters. It lists down the available satellites in Static Database (Stored Information). Whenever you set the focus to a satellite its corresponding details are displayed in the right side.


1. Press the **RED** color button to confirm and then the **Tuning Details** will be displayed.
2. Press the **◀▶** buttons to select **Satellite Scan** and then press the **OK** button to confirm.
3. Press the **▲▼** buttons to choose the options and then press the **◀▶** buttons to adjust the settings and press the **OK** button to confirm.
4. After pressing the **OK** button the frequency range is scanned with every possible symbol rate and polarisation and lists down all the collected carriers and quits from the tuning menu.
5. Press the **EXIT** button to exit the menu.



Blind Scan

You can collect all the available carriers & services from air according to the specified carrier frequency range.

1. Press the **RED** color button to confirm and then the **Tuning Details** will be displayed.
2. Press the **◀▶** buttons to select **Blind Scan** and then press the **OK** button to scan.
3. Press the **▲▼** buttons to choose the options and then press the **◀▶** buttons to adjust the settings and press the **OK** button to confirm.

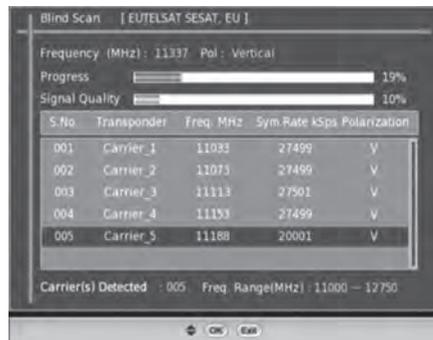


4. After the tuning is completed your receiver will save the collect carriers & services automatically and quits from the tuning menu.
5. Press the **EXIT** button to exit the menu.

Auto Scan

In Auto Scan Menu if you prefer to collect all the carriers of the satellite that would fall on a specific range of frequency.

1. Press the **RED** color button to confirm and then the **Tuning Details** will be displayed.
2. Press the **◀▶** buttons to select **Auto Scan** and then press the **OK** button to confirm.
3. Press the **▲▼** buttons to choose the options and then press the **◀▶** buttons to adjust the settings and press the **OK** button to confirm.
4. After pressing the **OK** button the frequency range is scanned with every possible symbol rate and polarisation and lists down all the collected carriers.
5. After complete the tuning will save all the collected carriers and informations that time the "Successfully Saved" message will be displayed.
6. Press the **EXIT** button to exit the menu.

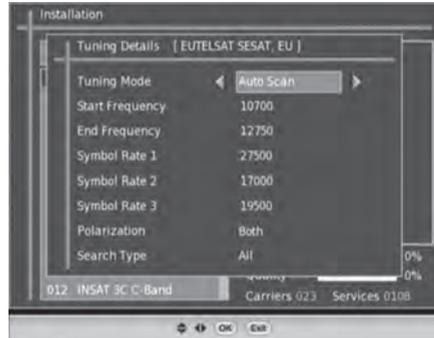

New Transponder

You can Add new carrier / Edit or Rescan the available carriers & delete the selected carriers options.

1. Press the **Yellow** color button to select the New TP menu and then the menu will be displayed.
2. Press the **▲▼** buttons to choose the options and then press the **◀▶** buttons to adjust the settings and press the **OK** button to confirm.
3. In this menu a new carrier can be added under the selected satellite. You can use the **◀▶▲▼** buttons to select and entered params (i.e) frequency, symbol rate and polarization are already exists in the database, then "Transponder Already exists" message will be displayed.
4. After complete the tuning it will save all the collected carriers and informations, that time the "Successfully Saved" message will be displayed.
5. Press the **EXIT** button to return previous menu.



Edit LNB

In the Installation menu you can select and edit the LNB information like **LNB Freq / LNB Power / 22KHz / DiSEqC / Positioner** for any satellite. This receiver support USALS / DiSEqC1.0 / DiSEqC1.1 / DiSEqC1.2 feature. There are 8 number of LNB's are available and using this we can pre-store the informations with different settings.


1. Press the **Green** color button to select the **LNB** menu.
2. Press the **▲▼** buttons to choose the options and then press the **◀▶** buttons to adjust the settings and press the **OK** button to confirm the "Successfully Deleted" message will be dispalyed.
3. Press the **Green** color button again to return previous menu or press the **EXIT** button to return Main Menu.
4. Press the **EXIT** button again to exit the menu.



Delete Satellite

Delete Satellite aids to delete unnecessary satellite records. If a satellite is delete under the carriers and service informations are lost.

Delete Satellite menu shows the list of satellites available in the Installed information. The navigation could be done by pressing **▲▼** buttons. Whenever focus is brought to a particular satellite, its corresponding details in Active database (Installed Information) is shown on the right side you can select multiple satellites by pressing the **◀▶** buttons. When **OK** button is pressed the confirmation will be asked whether to delete the selected satellites. If you press the **◀▶** buttons, to select **Yes** then all the information related to the selected satellites will be deleted.

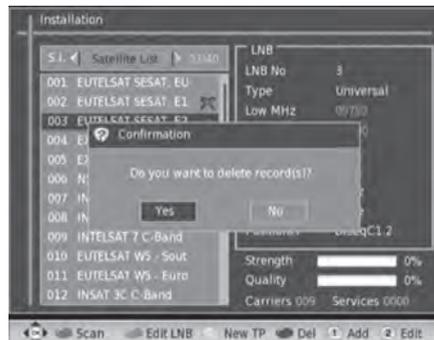

Delete Transponder


You can delete the carrier from the active database and perform either single or multiple carrier deletion.

Press the **OK** button then you can delete the selected carriers. Press the ◀▶ buttons to select multiple carriers for deletion.

When you press the **OK** button the confirmation will be displayed.

Press the ◀▶ buttons to select **Yes** and press the **OK** button to confirm the "Successfully Deleted" message will be displayed.

If press the ◀▶ buttons to select **No** it will be exit the previous menu.


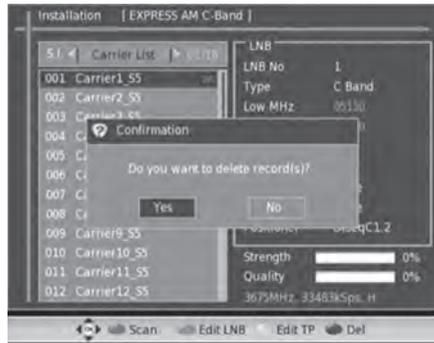


Factory Default

Factory Default option aids to restore the Factory setting.


Be careful when using this function, because it will erase all the data and parameters that are set earlier in the receiver. Once you made a factory default they will have to re-install their preferences.

1. Press the **MENU** button and then press the **▲▼** buttons to select **System Installation**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Factory Default** and then press the **OK** button to display the confirmation menu.
3. Press the **◀▶** buttons to select **Yes** and press the **OK** button to confirm the password entry dialog will be displayed. (Default password is 0000) If press the **◀▶** buttons select **No** will return to the previous menu.
4. After you entered the password in the menu the "Successfully Deleted" message will be displayed.
5. Press the **OK** button to return to the previous menu.
6. Press the **EXIT** button to exit the menu.

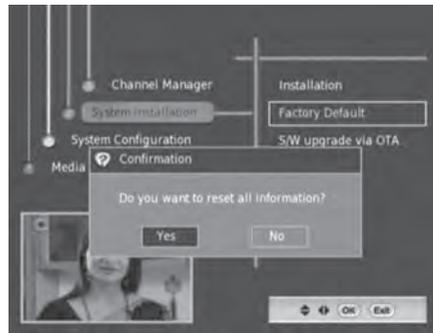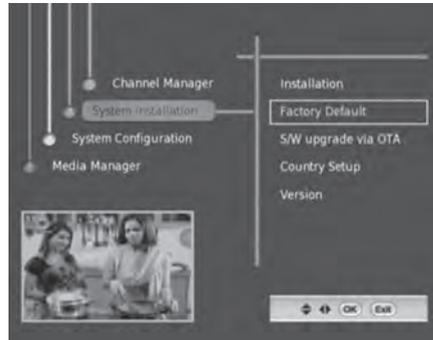

S/W Upgrade via OTA


1. Press the **MENU** button and then press the **▲▼** buttons to select **System Installation**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **S/W Upgrade via OTA** and then press the **OK** button to display the menu and then "S/W searching in progress" message will be displayed.
3. If OTA data is available in AIR then the downloading will be start with loader OSD. But in this S/W OTA downloading feature is not yet supported.

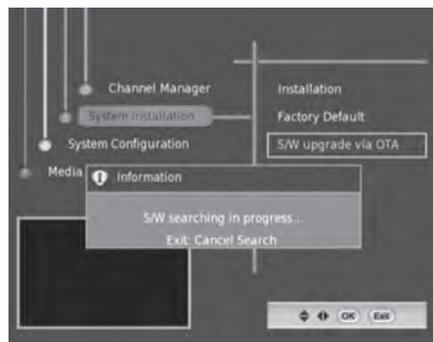

Country Setup

You can select the city to install the services in the country setup dialog.


1. Press the **MENU** button and then press the **▲▼** buttons to select **System Installation**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Country Setup** and then press the **OK** button to display the menu.
3. Press the **OK** button to return to the previous menu.
4. Press the **EXIT** button to exit the menu.

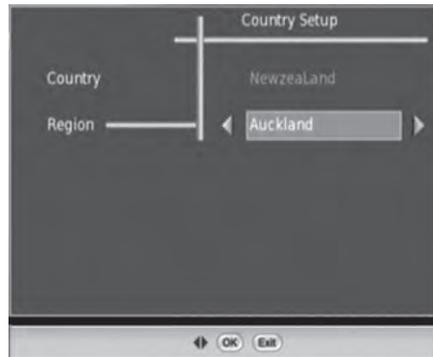

Version

The Version menu displays the Hardware / Chip / Software / Loader Version / Last built date and time of the application.

1. Press the **MENU** button and then press the **▲▼** buttons to select **System Installation**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Version** and then press the **OK** button to display the menu.
3. Press the **OK** button to return to the previous menu.
4. Press the **EXIT** button to exit the menu.

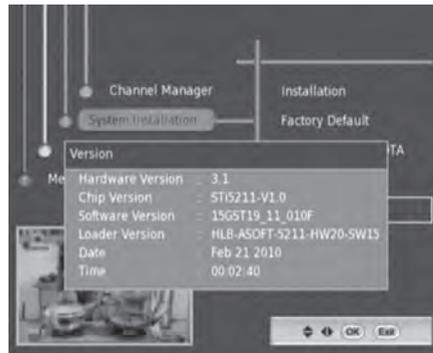


Customising the System Configuration

Language Setup

The Language menu aids to modify the on Screen Display OSD / 1st Preferred Audio / 2st Preferred Audio / 1st Preferred Subtitle / MHEG language and Hearing Impaired setting to ON/OFF.


1. Press the **MENU** button and then press the **▲▼** buttons to select **System Configuration**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Language** and then press the **OK** button to display the menu.
3. Press the **▲▼** buttons to choose the options and then press the **◀▶** buttons to adjust the settings.
4. Press the **OK** button to confirm and the "Successfully Saved" message will be displayed.
5. Press the **EXIT** button to exit the menu.

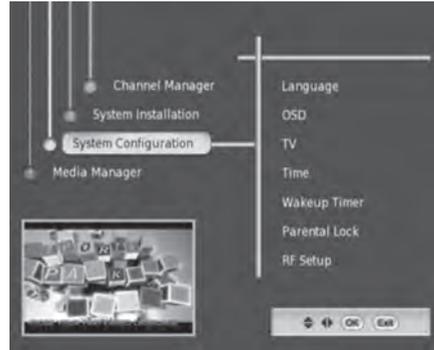


OSD Setup

The **OSD** menu aids to modify the On Screen Display settings OSD Theme / OSD Timeout value / Banner Position and Subtitle ON/OFF.

1. Press the **MENU** button and then press the **▲▼** buttons to select **System Configuration**. Press the **▶** button or the **OK** button to confirm.

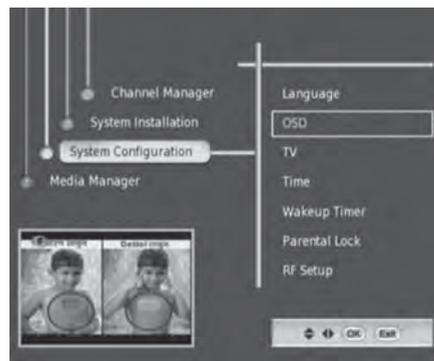



2. Press the ▲▼ buttons to select **OSD** and then press the **OK** button to display the menu.
3. Press the ▲▼ buttons to choose the options and then press the ◀▶ buttons to adjust the settings.
4. Press the **OK** button to confirm and return to the previous menu.
When you press the **OK** button in LCN type the "Successfully Saved" message will be displayed.
5. Press the **EXIT** button to exit the menu.

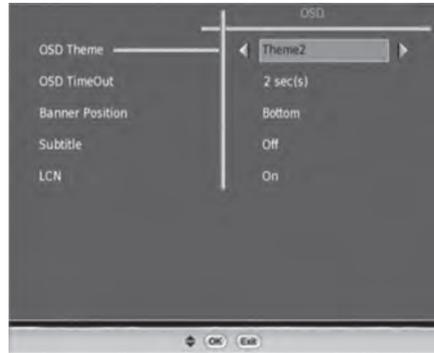

TV Setup

TV setup menu aids to set the parameters of the Aspect Ratio / Digital Video / HDMI output mode / Brightness and Contrast controls.


1. Press the **MENU** button and then press the ▲▼ buttons to select **System Configuration**. Press the ▶ button or the **OK** button to confirm.
2. Press the ▲▼ buttons to select **TV** and then press the **OK** button to display the menu.
3. Press the ▲▼ buttons to choose the options and then press the ◀▶ buttons to adjust the settings.
4. Press the **OK** button to confirm and return to the previous menu.
When you press the **OK** button After setting the values the "Successfully Saved" message will be displayed.
5. Press the **EXIT** button to exit the menu.

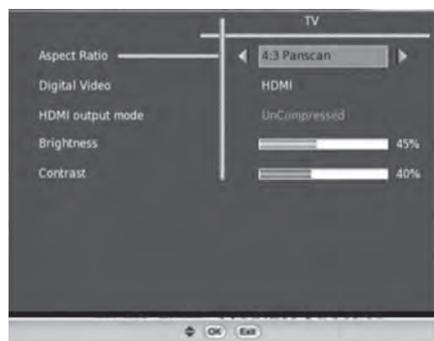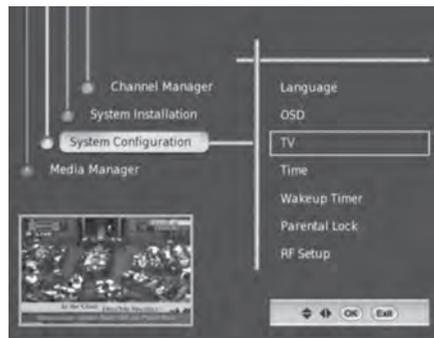

Time Setup

Time Setup menu aids to perform adjust the system time as per you wish.

1. Press the **MENU** button and then press the **▲▼** buttons to select **System Configuration**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select **Time** and then press the **OK** button to display the menu.
3. Press the **▲▼** buttons to choose the options and then press the **◀▶** buttons to adjust the settings.
4. Press the **OK** button to confirm and return to the previous menu.
When you press the **OK** button After setting the values the "Successfully Saved" message will be displayed.
5. Press the **EXIT** button to exit the menu.

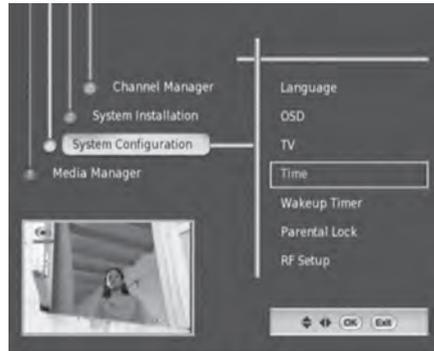


Wakeup Timer

Wakeup timer feature will allow you to set the reminder to switch to their preferred events / to remind about some important messages and time record.

When your receiver in standby mode it will automatically wakeup when the event time is reached. After the event is finished then it will go to the standby mode.

Wake up timer will switch to the service when the timer is set for the particular service or the selected information will be displayed until you presses any buttons.


1. Press the **MENU** button and then press the **▲▼** buttons to select **System Configuration**. Press the **▶** button or the **OK** button to confirm.

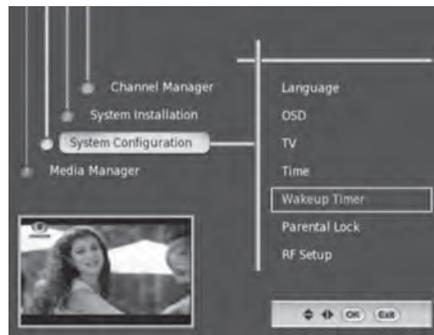

2. Press the ▲▼ buttons to select **Wakeup Timer** and then press the **OK** button to display the menu.
3. Press the ▲▼ buttons to choose the options and then press the ◀▶ buttons to adjust the settings.
4. Press the **OK** button to confirm and return to the previous menu.

When you press the **OK** button After setting the values the "Successfully Saved" message will be displayed.

5. Press the **EXIT** button to exit the menu.

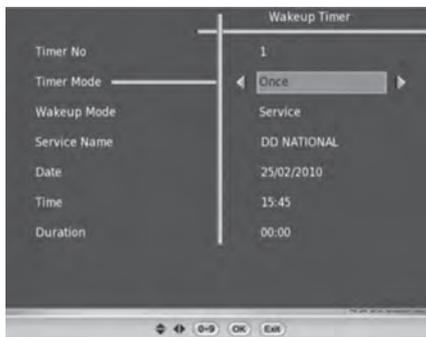

RF Setup

If your receiver output is to be taken through RF modulator then the RF mode (PAL-BG & PAL-I) and the RF Channel number (from 21 to 69) has to be set appropriately. The channel number 69 is set in default. And then you need to tune your TV to search a channel.

1. Press the **MENU** button and then press the ▲▼ buttons to select **System Configuration**. Press the ▶ button or the **OK** button to confirm.
2. Press the ▲▼ buttons to select **RF Setup** and then press the **OK** button to display the menu.




3. Press the ▲▼ buttons to choose the options and then press the ◀▶ buttons to adjust the settings.
4. Press the **OK** button to confirm and return to the previous menu.
5. Press the **EXIT** button to exit the menu.



Customising the Media Manager

In **Media Manager** menu you can perform the Record related operations.

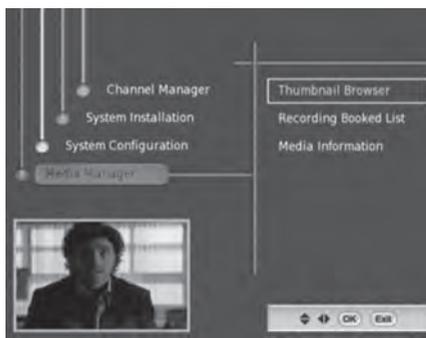

Thumbnail Browser

You can done the **Bookmark / Record Editing / Rename** operations in the menu.

1. Press the **MENU** button and then press the **▲▼** buttons to select **Media Manager**. Press the **▶** button or the **OK** button to confirm.
2. Press the **OK** button to confirm to display the **Thumbnail browser** menu.
3. Press the **EXIT** button to return the previous menu.
4. Press the **EXIT** button twice to exit the menu.




Button Functions in Thumbnail browser

▲▼	Press the ◀▲▼▶ buttons to select the recorded programme.
◀▶	
Delete	<ul style="list-style-type: none"> • Press the Red color button to display the menu and then press the OK button to confirm. • After pressing the OK button the "Do you want to delete record(s)" message will be displayed. • Press the ◀▶ buttons to select Yes to delete your selected programme. Press the ◀▶ buttons to select No to return the previous menu.
Info	Press the INFO button the Options Menu will be displayed.(refe page the detail)
V/A/P	Press the Blue color button to switch between VIDEO / AUDIO / PHOTO .
Genre	Press the Green color button to display the Genre Menu .
OK	Press the OK button to play your selected programme.
Exit	Press the EXIT button to return the previous menu.

Please check your Hard Drive connect or reinstall, when you press the **OK** button the "Media Not alive" message displayed,


Record Bookmark

1. Press the **INFO** button in **Thumbnail Browser** menu and then press the **OK** button to select Bookmark in option list.
2. After pressed the **OK** button the Bookmark menu will be displayed and playback get started for that record.
3. During playback, you can press the **GREEN** color button their preferred point. Each marked point in the record will show the time of the bookmark location. You can press the **◀▶** button to select the bookmarked and then record playback will be started from the particular bookmarked location.
4. When you press the **RED** color button it will remove the bookmark point.

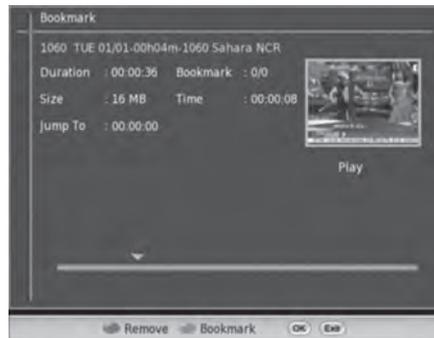


- This Recorder supports maximum 8 bookmarks for one record. After setting the maximum bookmark points the information will be displayed.

In this menu all the  buttons are supported.

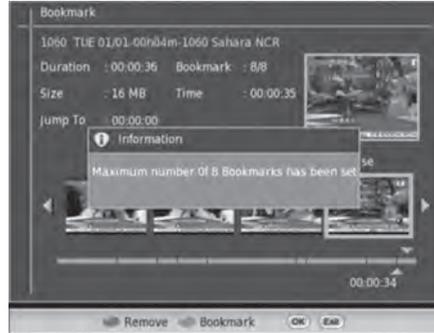

Record Editing

- Press the **INFO** button in **Thumbnail Browser** menu and press the **OK** button to select Record Editing in option list.
- After pressed the **OK** button the **Record Editing** menu will be displayed and playback get started for that record.
- Record editing option allows you to remove the unwanted portion of the record. The selected record should be of minimum 20 second duration. You can locate the particular point in a record using select playback with the different trick modes/time play options.
- You have to select a pair of points with minimum gap of 5 seconds. And eight different pairs can be selected at a time. If you want to modify the selected pair, they can delete/edit the selected AB point.
- Pressing the **OK** button will ask confirmation to remove the portion in between the AB points. If you use the **◀▶** buttons to select **YES** then the portion will be removed and which can not be retrieved. If you use the **◀▶** buttons to select **NO** then the portion will not be removed.
- You can delete the unwanted record press the **OK** button provided and confirmation will be asked. If use the **◀▶** buttons to select **YES** then the record will be deleted and which can not be retrieved. If you use the **◀▶** buttons to select **NO** then the record will not be deleted.

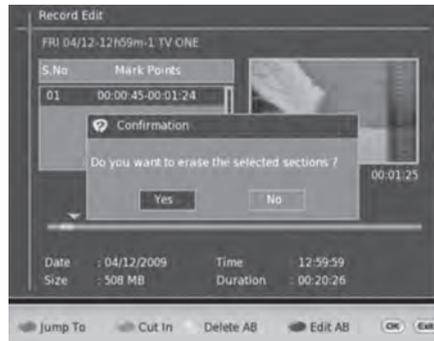

- You can delete the unwanted pair of record press the **Yellow** color button provided and confirmation will be asked. If use the ◀▶ buttons to select **YES** then the record will be deleted and which can not be retrieved. If you use the ◀▶ buttons to select **NO** then the record will not be deleted.



Rename

- Press the **INFO** button in **Thumbnail Browser** menu and press the **OK** button to select Rename in option list.
- After pressed the **OK** button the **Keypad** menu will be displayed.
- The new name can be given by selecting the letters in the keypad. First position the cursor in the service name. To select a particular button in the keypad and press the corresponding **numeric** buttons. To Change the character, do the repeated press to toggle b/w the options. You can use the **color** buttons to change the **numeric / alphabetic** keypads.



Recording Booked List

You can viewed all event timers booked in the Booked List.

- Press the **MENU** button and then press the ▲▼ buttons to select **Media Manager**. Press the ▶ button or the **OK** button to confirm.
- Press the ▲▼ buttons to select and press the **OK** button to enter the **Recording Booked List** menu.



3. You can press the **RED** color button to delete the event in the list.
After pressed the **RED** color button a confirmation will be displayed and then press the ◀▶ buttons to select **Yes** to delete the event. If press the ◀▶ buttons to select **No** it will return to the previous menu.
4. Press the **EXIT** button twice to exit the menu.



Media Information

The Media Information menu can be used to view your Hard Drive informations, Format Volume and Safe remove Hard Drive.

1. Press the **MENU** button and then press the **▲▼** buttons to select **Media Manager**. Press the **▶** button or the **OK** button to confirm.
2. Press the **▲▼** buttons to select and press the **OK** button to enter the **Media information** menu.




3. When you press the **RED** color button a confirmation will be displayed and press the **◀▶** buttons to select **Yes** and press the **OK** button to Format Hard Drive and the "Media formatted Successfully" message will be displayed. If press the **◀▶** buttons to select **No** it will return to the previous menu.

This USB storage device will be formatted in this operation, please backup your important data.



4. When you press the **Green** color button a confirmation will be displayed and press the **◀▶** buttons to select **Yes** and press the **OK** button to remove then the "Please Wait..." will be displayed and exit to normal TV viewing. If press the **◀▶** buttons to select **No** it will return to the previous menu.

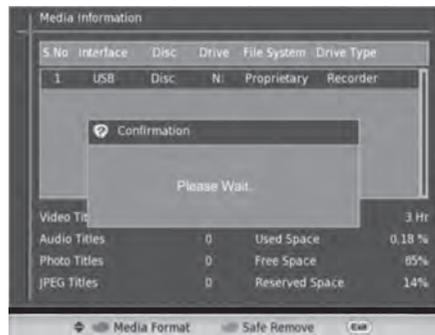

5. Press the **EXIT** button twice to exit the menu.

Troubleshooting

If you experience problems with this receiver or its installation, in the first instance please read carefully the relevant sections of this User Manual and this Troubleshooting section.

Problem	Possible cause	What to do
Display on front panel not lit	Main lead unplugged	Check mains lead
	Main fuse blown	Check fuse
Tuning failed or Database empty or No signal found	<ul style="list-style-type: none"> Satellite Dish cable may be disconnected. Satellite Dish may be damaged or misaligned. 	<ul style="list-style-type: none"> Check cable from receiver to satellite dish. Get a qualified technician to check satellite dish alignment.
	Out of digital signal area	Check with dealer
No picture or sound	<ul style="list-style-type: none"> Program not broadcasting now Satellite Dish cable may be short circuit 	<ul style="list-style-type: none"> Return to another channel Check cable from receiver to satellite dish troubleshooting and power on/off again.
Mosaic blocks in picture or picture freezes	Aerial may not be compatible	Check aerial
Scrambled channel message	Channel is scrambled	Select an alternative channel
Forgotten channel lock code		Use the override code(0000)
No response to remote control	Receiver off	Plug in and turn on receiver
	Handset not aimed correctly	Aim handset at front panel
	Front panel obstructed	Check for obstructions
	Remote control batteries are inserted incorrectly	Check batteries direction
	Handset batteries exhausted	Replace remote control batteries
After moving the receiver to another room, find can't receive the digital reception	The signal feed may come through a distribution system which may reduce the digital signal now received by the receiver	Try a direct feed from the satellite dish

If this doesn't work, contact a qualified repair technician, never attempt to repair the receiver yourself.

Specifications

Item		Specification
Connectors	LNB INPUT	IF in, connects to your dish antenna
	LNB OUT	IF out, provides a loop out for a second STB
	TV ANT IN	IEC female connector
	To TV	Anlog RF output
	USB	USB port for software upgrade and record
	HDMI	For video and audio output
	S/PDIF	RCA, for SPDIF digital audio output
	Video	RCA, for CVBS video output
	YCbCr	RCA, for component video output
	L / R x 2	RCA, Analog audio output
Power supply	Input	110-240V ~ 50/60Hz
	Consumption	30W max. Standby mode < 6W
Display	Resolution	720x576i(CVBS mode), 1080i(HDMI and YCbCr mode)
	Aspect Ratio	4:3(Letterbox / Panscan), 16:9(Fullscreen / Pillar Box), Auto
Others	Sound Mode	Right, Left, Stereo, Dolby

Specifications are subject to change without prior notice.



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alternation that affects the performance or reliability of product.

In the unlikely event that your product fails to work normally, please contact the supplier and have your receipt of purchase on hand.

This guarantee is subject to the following provisions

- It is only valid within boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the Instructions contained in the manual.
- This product must be used solely for domestic purposes.
- The guarantee does not cover accidental damage.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- This guarantee is in addition to, and does not diminish, your statutory or legal rights.

